ASC 150 Solar

Data sheet



1. ASC 150 Solar

1.1 About	3
1.1.1 Software packages	3
1.2 Single line drawings for single solar controllers	3
1.3 Single-line application diagrams for PMS	6
1.3.1 Off-grid power management	6
1.3.2 Grid-tied power management	8
1.4 Power management	10
1.4.1 Introduction	10
1.4.2 Power management plant modes	10
1.4.3 Power management features	10
1.5 Single-line application diagrams for open PMS	11
1.5.1 Off-grid open PMS	11
1.5.2 Grid-tied open PMS	12
1.6 Open PMS	13
1.7 Display, buttons and LEDs	15
1.8 Typical wiring for solar controller	16
1.9 Functions and features	17
1.9.1 Solar functions	17
1.9.2 General controller functions	17
1.9.3 Supported photovoltaic systems	
1.9.4 Emulation	
1.9.5 Easy configuration with the utility software	20
1.10 Protections overview	20
2. Compatible products	
2.1 Touch display unit: TDU	22
2.2 Power meters	22
2.3 Power measurements from gensets	22
2.4 Power management	22
2.5 Open PMS	23
2.6 Remote monitoring service: Insight	23
2.7 Additional inputs and outputs	23
2.8 Additional operator panel, AOP-2	
2.9 Other equipment	
2.10 Controller types	24
3. Technical specifications	
3.1 Electrical specifications	25
3.2 Environmental specifications	27
3.3 UL/cUL Listed	28
3.4 Communication	28
3.5 Approvals	29
3.6 Dimensions and weight	
3.7 Spare parts and accessories	30
4. Legal information	
4.4.Ofb	24

1. ASC 150 Solar

1.1 About

The ASC 150 Solar controller is a fully flexible controller to control and protect a photovoltaic (PV) system with up to 32 inverters. Use ASC 150 Solar to add PV to an existing or new site. You can have up to 16 ASC Solar controllers working together.

Use ASC 150 Solar as a single controller to add PV power and a mains connection (optional) to an existing site.

In a power management system (PMS), use ASC 150 Solar for seamless integration of PV power with other power sources (including storage, gensets and/or mains). To save fuel, the PMS maximises PV penetration, while making sure that the gensets meet their minimum load requirements. The PMS also makes sure that spinning reserve requirements are met, and responds quickly to load and weather changes.

For sites with genset and/or mains controllers from other suppliers, use ASC 150 Solar with open PMS to add solar, storage and/or mains controllers.

The controller has built-in AC measurements. There are two sets of voltage measurements (three phases, and (optional) the neutral phase), and one set of current measurements (three phases). There is also a 4th current measurement that can be used to measure mains power. The controller can receive power measurements from power meters, genset communication, and/or transducers.

Operators can easily control the system from the display unit. Alternatively, use the communication options to connect to an HMI/SCADA system.

1.1.1 Software packages

You can choose the Extended or Premium software package.

1.2 Single line drawings for single solar controllers


The ASC 150 Solar can operate as a single controller, that is, without power management communication to other controllers. Single controllers are particularly useful for brownfield applications. Single controllers can also be used in greenfield applications.

Software variants

Single solar controller	Extended	Premium
External gensets	4	16
External mains	1	16
Photovoltaic breaker (PVB) control	•	•
Mains support • Mains breaker • Parallel operation • Measurements from a mains power meter		•

Data sheet 4921240623G EN Page 3 of 31


Single solar controller with fixed power

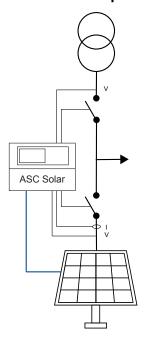

Fixed power: When given a signal, the controller starts, synchronises, and connects the PV. After the breaker closes, the controller ramps up the load to the set point level. When the stop command is given, the PV breaker is de-loaded, opened and the PV is stopped.

The solar controller can also control the mains breaker. For fixed power, the controller does not need power measurements from other power sources.

Single solar controller with peak shaving, and mains power export

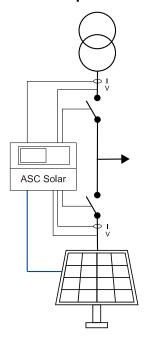


- **Peak shaving**: Power plant where the PV supplies the peak load demand and runs parallel to mains.
- **Mains power export**: PV with fixed kW set point (excluding increasing load).

The solar controller calculates the power set points for the PV power plant based on power readings and breaker positions.

- **Only one mains**: You can use the controller's 4th current transformer terminals to measure the mains power.
- Multiple or other power sources: You must use power meters, communication, or transducers.


Data sheet 4921240623G EN Page 4 of 31

Adding a single solar controller to an existing grid-tied plant (brownfield application)

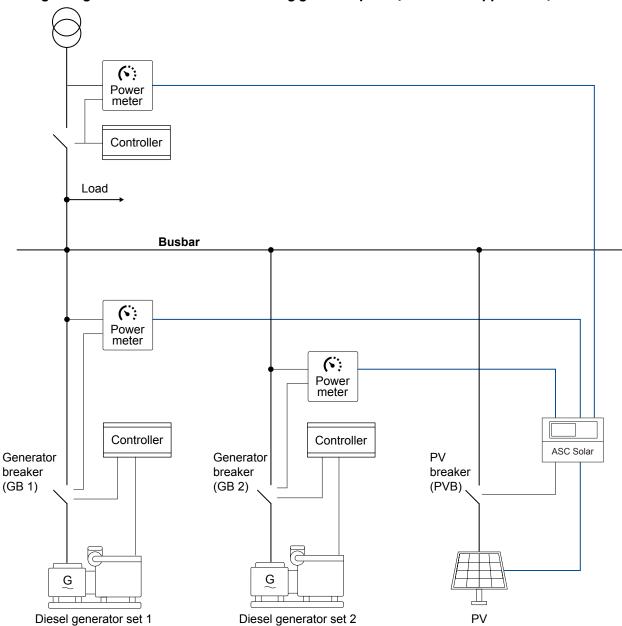

Data sheet 4921240623G EN Page 5 of 31

Adding a single solar controller to an existing off-grid plant (brownfield application)

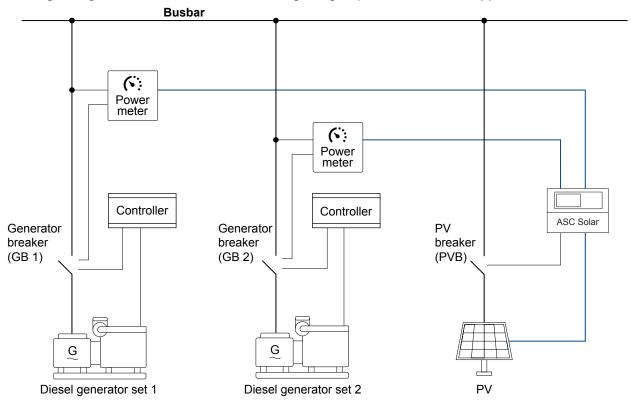

1.3 Single-line application diagrams for PMS

1.3.1 Off-grid power management


The ASC 150 Solar controllers provide flexibility for off-grid applications.

The ASC 150 Solar controller can work with other DEIF controllers to manage the PV power with other power sources. When used with a genset, the ASC 150 Solar controller uses the genset power measurements to calculate the set points for the PV power. When used with storage, the available PV power is combined with the charge/discharge scheme to determine the set point for the PV power.


These controller configurations can be used in greenfield applications. To use these configurations in brownfield applications, all the controllers must be replaced with DEIF controllers.

Data sheet 4921240623G EN Page 6 of 31

Off-grid with genset(s) and solar

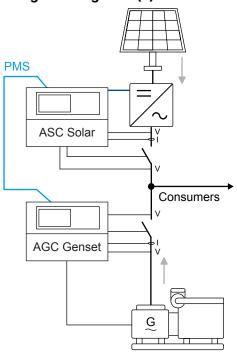


Off-grid with genset(s), solar and storage

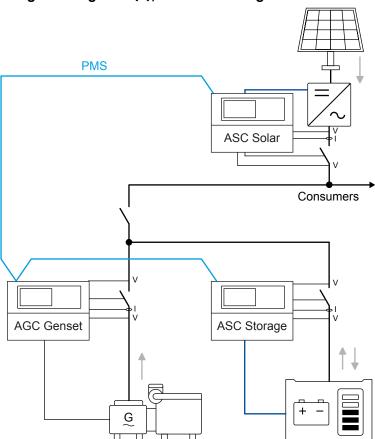

Data sheet 4921240623G EN Page 7 of 31

Off-grid with solar and storage

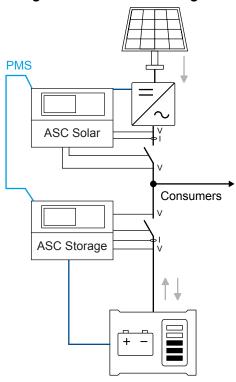


1.3.2 Grid-tied power management

The ASC 150 Solar controllers can integrate seamlessly into grid-tied applications. This includes power management applications with other DEIF controllers using CAN bus communication.

The ASC 150 Solar can feed surplus PV energy to the grid, or charge the energy storage system (ESS). Alternatively, the ASC 150 Solar can regulate the PV production to match the self-consumption, thereby preventing any feed-in of PV power to the grid.


These controller configurations can be used in greenfield applications. To use these configurations in brownfield applications, all the controllers must be replaced with DEIF controllers.

Grid-tied solar and genset

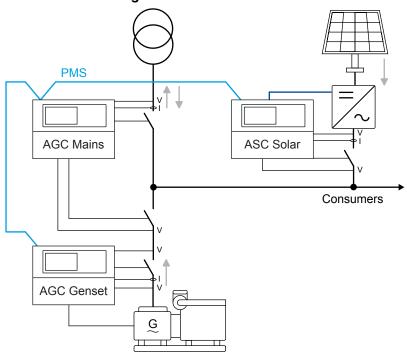


Data sheet 4921240623G EN Page 8 of 31

Grid-tied solar, genset and storage

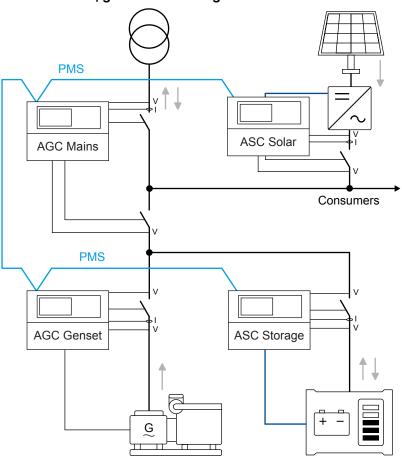

Grid-tied solar and storage

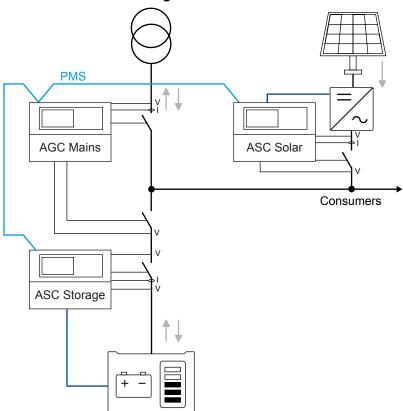

Data sheet 4921240623G EN Page 9 of 31

1.4 Power management

1.4.1 Introduction

The power management system automatically supplies the power that is necessary for the load efficiently, safely and reliably.

The power management system:

- · Automatically maximises PV power
- · Automatically starts and stops generators
- Automatically closes and opens breakers
- Optimises the fuel consumption
- · Balances the loads in the system
- · Deploys plant logic
- · Makes sure that the system is safe

You can monitor the complete power management system from a graphical supervision page in the utility software. You can also see running status, hours in operation, breaker status, the condition of the mains and busbars, fuel consumption, and so on.

Multi-master system

The power management system is a multi-master system, for increased reliability. In a multi-master system all vital data is transmitted between the controllers, so that all the controller know the power management status (calculations and position) in the application. As a result, the application does not have a single master controller.

Busbar sections

The plant can be divided by one to eight bus tie breakers. This makes it possible to run different sections of the plant in different plant modes. For example, you can use this to test a section, or to divide the load into primary and secondary loads.

1.4.2 Power management plant modes

The plant modes are configurable and can be changed at any time. All modes can be combined with Automatic Mains Failure mode (AMF). You can use the controllers for the following applications:

Standard plant modes	Applications
Island mode	Power plant with synchronising generators.
Automatic Mains Failure	Critical power/emergency standby plants, black start generator.
Fixed power	Power plant with fixed kW set point (including building load).
Peak shaving	Power plant where generator supplies peak load demand paralleled to the mains.
Load take-over	Plant mode where the load is moved from mains to generator. For example, peak demand periods, or periods with a risk of power outages.
Mains power export	Power plant with fixed kW set point (excluding building load).

1.4.3 Power management features

Power management features	Extended	Premium
Power management operation*:		
Number of generator controllers	32	32
Number of mains controllers	32	32
Number of BTB controllers	8	8

Data sheet 4921240623G EN Page 10 of 31

Power management features	Extended	Premium
 Number of solar controllers Number of storage (BESS) controllers Number of load controllers (ALC-4) 	16 16 8	16 16 8
Hybrid ready (compatible with ASC-4 and ASC 150)	•	•
Load controller support (compatible with ALC-4)	•	•
Genset load-dependent start and stop	•	•
EasyConnect	•	•
Asymmetrical genset load sharing	•	•
N + X (Secured mode)	•	•
Genset priority selection: • Manual • Running hours • Fuel optimisation	•	•
Safety stop of genset	•	•


*Restrictions on controllers

ID 1 to 24	ID 25 to 32	ID 33 to 40
AGC Genset (1 to 32)		
AGC Mains (1 to 32)		
	ASC Solar (2	25 to 40)
	ASC Storage/Ba	attery (25 to 40)
	ALC-4 (25 to 40)
		AGC BTB (33-40)
		External BTB (33-40)

1.5 Single-line application diagrams for open PMS

1.5.1 Off-grid open PMS

Off-grid solar, storage and external genset(s)

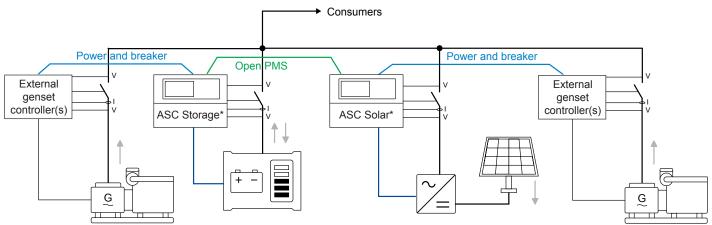


Data sheet 4921240623G EN Page 11 of 31


NOTE * You can use multiple controllers in the application. Power measurements can be connected to the closest ASC controller.

1.5.2 Grid-tied open PMS

Grid-tied solar, storage and external mains

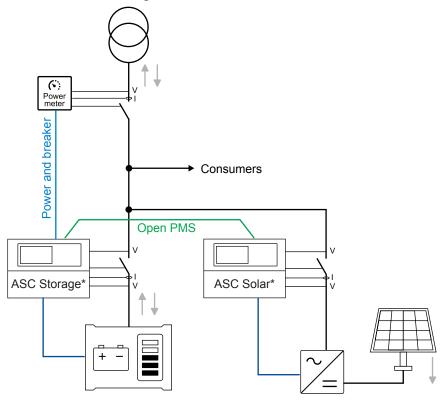


Grid-tied solar, storage, external genset(s) and external mains

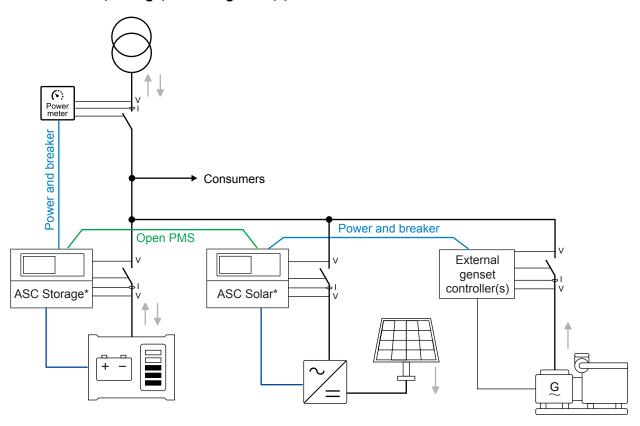

Data sheet 4921240623G EN Page 12 of 31

Grid-tied solar, storage, mains and external genset(s)

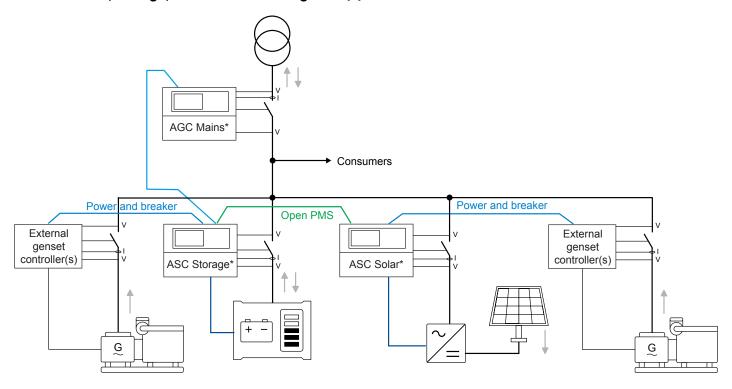

NOTE * You can use multiple controllers in the application. Power measurements can be connected to the closest ASC controller.

1.6 Open PMS

Open PMS is a power management system that consists of solar and/or storage controllers (ASC 150 and/or ASC-4). Open PMS can also include a mains controller. The ASC controller(s) get power measurements from the externally controlled power source(s). You can therefore use open PMS to add power management to a brownfield application with third party gensets.

Open PMS automatically supplies the power that is necessary for the load efficiently, safely and reliably:

- Automatically maximises PV power
- · Automatically optimises ESS power
- Automatically closes and opens breakers
- Balances the loads in the system
- · Deploys logic

The open PMS operating data can be shown graphically on the controller display. You can also monitor open PMS from a graphical supervision page in the utility software.

Open PMS features

Open PMS features	Extended	Premium
Power management operation limits: • External generator controllers per solar/storage controller • Mains controllers* • External mains connections • Solar controllers* • Storage (BESS) controllers*	4 32 1 16 16	16 32 1 16 16
EasyConnect	•	•
External sources included in the available power: • Supply the busbar load	•	•

Data sheet 4921240623G EN Page 13 of 31

Open PMS features	Extended	Premium
Charge batteries	•	•
Minimum and optimal genset load	•	•

*Restrictions on controllers

ID 1 to 24	ID 25 to 32	ID 33 to 40
AGC Mains (1 to 32)		
	ASC Solar (2	25 to 40)
	ASC Storage/Ba	ttery (25 to 40)

Plant modes with a mains controller

With a mains controller, open PMS supports:

- Configurable mains power set point
- Configurable mains operating mode
- Auto-start signal for the application to the mains controller
- Standard AGC mains PMS features, including cos phi set points, and mains breaker control

Standard plant modes	Applications
Island mode	Power plant with synchronising generators.
Automatic Mains Failure	Critical power/emergency standby plants, black start generator.
Fixed power	Power plant with fixed kW set point (including building load).
Peak shaving	Power plant where generator supplies peak load demand paralleled to the mains.
Load take-over	Plant mode where the load is moved from mains to generator. For example, peak demand periods, or periods with a risk of power outages.
Mains power export	Power plant with fixed kW set point (excluding building load).

Plant modes with an external mains


The ASC that is connected to the external mains operates as an AGC mains lite and controls the mains mode.

Standard plant modes	Applications
Fixed power	Power plant with fixed kW set point (including building load).
Peak shaving	Power plant where generator supplies peak load demand paralleled to the mains.
Mains power export	Power plant with fixed kW set point (excluding building load).

NOTE For an open external mains breaker, open PMS cannot synchronise so that the mains breaker can close. That is, open PMS runs in island mode and cannot back sync.

Data sheet 4921240623G EN Page 14 of 31

1.7 Display, buttons and LEDs

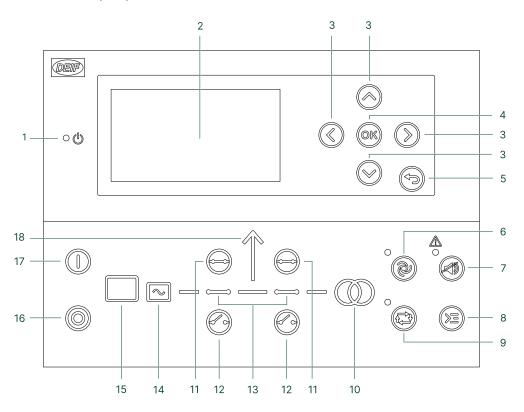


No.	Name	Function
1	Power	Green: The controller power is ON. OFF: The controller power is OFF.
2	Display screen*	Resolution: 240 x 128 px. Viewing area: 88.50 x 51.40 mm. Six lines, each with 25 characters.
3	Navigation	Move the selector up, down, left and right on the screen.
4	ОК	Enter the Menu system. Confirm the selection on the screen.
5	Back	Go to the previous page.
6	AUTO mode	The controller automatically starts and stops (and connects and disconnects) the PV, and automatically controls the power. No operator actions are needed.
7	Silence horn	Turns off an alarm horn (if configured) and enters the Alarm menu.
8	Shortcut menu	Access the Jump menu, General Shortcuts, Mode selection, and Lamp test.
9	SEMI-AUTO mode	The operator or an external signal can also open and close the PV breaker. Automatic controller actions are not possible. The controller automatically synchronises before closing a breaker, and automatically de-loads
		before opening a breaker.
10	Mains symbol	Green: Mains/busbar voltage and frequency are OK. The controller can synchronise and close the breaker. Red: Mains/busbar voltage failure.
11	Close breaker	Push to close the breaker.
12	Open breaker	Push to open the breaker.
13	Breaker symbols	Green: Breaker is closed. Green flashing: Synchronising or de-loading. Red: Breaker failure.

Data sheet 4921240623G EN Page 15 of 31

No.	Name	Function
14	Inverter	Green: Inverter voltage and frequency are OK. The controller can synchronise and close the breaker. Green flashing: The inverter voltage and frequency are OK, but the V&Hz OK timer is still running. The controller cannot close the breaker. Red: The inverter voltage is too low to measure.
15	Photovoltaic	Green: There is solar PV system available feedback. Green flashing: The solar PV system is getting ready. Red: The solar PV system is not running, or there is no availability feedback.
16	Stop	Stops the PV if SEMI-AUTO is selected.
17	Start	Starts the PV if SEMI-AUTO is selected.
18	Load symbol	OFF: Power management application Green: The supply voltage and frequency are OK. Red: Supply voltage/frequency failure.

NOTE * You can use the display to monitor PV operation.

1.8 Typical wiring for solar controller

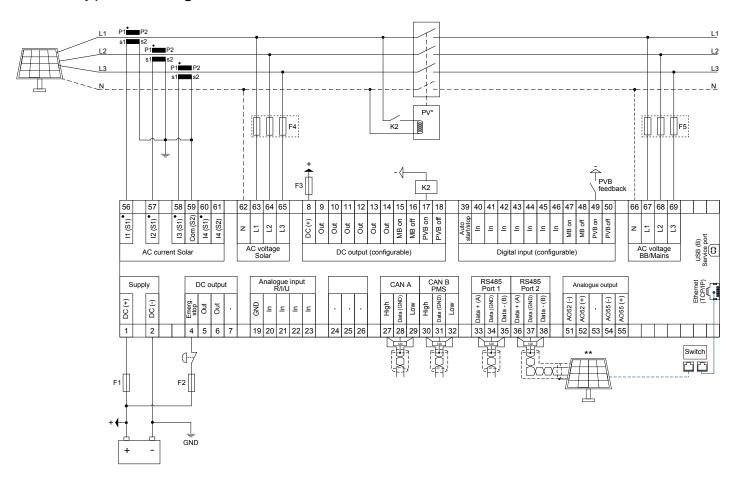

NOTE * PV breaker: Optional PV breaker.

NOTE ** Communication with PV inverter: The controller can use RS-485 or Ethernet communication.

Fuses:

- F1: 2 A DC max. time-delay fuse/MCB, c-curve
- F2: 6 A AC max. time-delay fuse/MCB, c-curve
- F3: 4 A DC max. time-delay fuse/MCB, b-curve
- F4, F5: 2 A AC max. time-delay fuse/MCB, c-curve

Data sheet 4921240623G EN Page 16 of 31

1.9 Functions and features

1.9.1 Solar functions

Spinning reserve

If there is a mains connection, the power management system can start and stop the genset(s) to provide a spinning reserve. The spinning reserve can be a percentage of the PV power production or the mains import.

Ideal for self-consumption applications

While in grid parallel mode, the ASC 150 Solar can feed surplus PV energy to the grid and generate profit in accordance with grid operator feed-in tariffs. Alternatively, the controller can regulate the PV production to match the self-consumption, thereby preventing any feed-in of PV power to the grid if prohibited by grid operator regulations.

Solar functions	Extended	Premium
Number of inverters Inverters with TCP/IP communication: • Separate IP addresses and/or multiple inverters at the same node • Select TCP or UDP	16 •	32* •
Photovoltaic breaker (PVB) control	•	•
Power management	•	•
Irradiance sensor	•	•
Weather station		•
Reactive power control		•
Inverter monitoring	•	•
Inverter start/stop logic	•	•
PV integration	•	•
Solar power load calculation	•	•
Ensure a minimum genset load	•	•
PV power counters (kWh)	•	•
Mains import/export power counters (kWh)	•	•
Get measurements from a PV power meter (optional)		•
Configurable dynamic power offset for the solar power reference (optional)	•	•

NOTE * From software version 1.17, the ASC 150 can have up to 32 TCP/IP connections, or 32 RTU connections.



More information

If you need to use weather forecasts and/or redundant controllers (option T1), use an **ASC-4 Solar controller**.



More information

For a system that includes gensets, up to 16 inverters, and a mains connection, you can use an **AGC 150 Hybrid controller**. If there is a mains, there can be one genset. If there is no mains, there can be up to two synchronising gensets, or up to four non-synchronising gensets. See the **AGC 150 Hybrid controller Data sheet**.

1.9.2 General controller functions

AC functions	Extended	Premium
Sets of nominal settings	4	4
Select the AC configuration:		

Data sheet 4921240623G EN Page 17 of 31

AC functions	Extended	Premium
 3-phase/3-wire 3-phase/4-wire 2-phase/3wire (L1/L2/N or L1/L3/N) 1-phase/2-wire L1 	•	•
100 to 690 V AC (selectable)	•	•
CT -/1 or -/5 (selectable)	•	•
4th current measurement: Power from a Mains, Genset, or PV	•	•

General functions	Extended	Premium
Emulation for testing and front load commissioning	•	•
Built-in test sequences (Simple test, Load test, Full test, and Battery test)	•	•
PLC logic (M-Logic)	40 lines	80 lines
Counters, including: • Breaker operations • kWh meter (day, week, month, total) • kvarh meter (day, week, month, total)	•	•
General purpose PID regulators (2 x built-in analogue outputs can use these PID regulator references)		4
4 additional analogue outputs (using 2 x IOM 230)		•
Simple load shedding and adding	•	•
Changeable controller type	•	•

Setting and parameter functions	Extended	Premium
Quick setup	•	•
User permission level	•	•
Password-protected setup	•	•
Trending on USW	•	•
Event logs with password, up to 500 entries	•	•

Display and language functions	Extended	Premium
Supports multiple languages (including Chinese, Russian, and other languages with special characters)	•	•
20 configurable graphical screens	•	•
Graphical display with six lines	•	•
Parameters can be changed on the display unit	•	•

Modbus functions	Extended	Premium
Modbus RS-485	•	•
Modbus TCP/IP	•	•
Configurable Modbus area	•	•

Data sheet 4921240623G EN Page 18 of 31

1.9.3 Supported photovoltaic systems

The ASC 150 Solar supports a wide range of PV systems, power meters, and weather stations. The controllers are compatible with photovoltaic (PV) systems from a wide range of manufacturers.

SunSpec compliance

All DEIF hybrid controllers are compliant with the SunSpec standards (see sunspec.org). DEIF controllers are therefore compatible with new inverters that use the generic SunSpec protocol.

Testing

Many PV inverter makers use the same protocol for a wide range of their products. New PV inverters often comply with the older protocol. If a specific inverter is not listed, but the maker is listed, there is a good chance that the DEIF controller is compatible.

If your PV inverter is not listed, DEIF can help to confirm compliance using the Modbus protocol documentation.

Implementing new protocols

Since new systems are launched every year, DEIF developers continuously implement new protocols. If your system is not listed, please contact DEIF. We can work with you to quickly implement the required protocol.



More information

See Application note, DEIF hybrid controller compatibility for the list of the supported protocols.

1.9.4 Emulation

The controller includes an emulation tool to verify and test the functionality of the application, for example plant modes and logics, breaker handling, mains and generator operation.


Application emulation is useful for training, customising plant requirements and for testing basic functionality that needs to be set up or verified.

Data sheet 4921240623G EN Page 19 of 31

1.9.5 Easy configuration with the utility software

Set up an application easily with a PC and the utility software.

You can also use the utility software to quickly configure the inputs, outputs, and parameters.

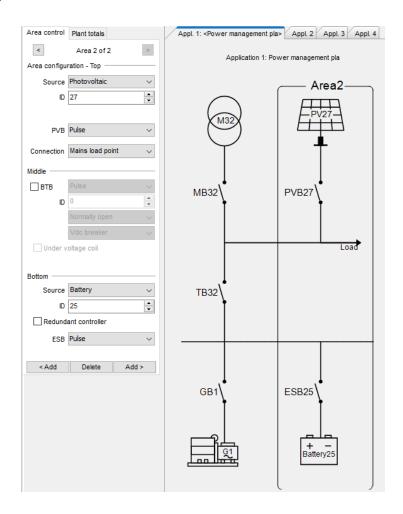

1.10 Protections overview

Protections	Alarms	ANSI	Operate time
Reverse power	2	32R	<200 ms
Fast over-current	2	50P	<40 ms
Over-current	4	50TD	<200 ms
Voltage dependent over-current	1	51V	
Over-voltage	2	59	<200 ms
Under-voltage	3	27P	<200 ms
Over-frequency	3	810	<300 ms
Under-frequency	3	81U	<300 ms
Unbalanced voltage	1	47	<200 ms
Unbalanced current		46	<200 ms
Under-excitation or reactive power import	1	32RV	<200 ms
Over-excitation or reactive power export	1	32FV	<200 ms
Overload*	5	32F	<200 ms
Neutral current		51N	<100 ms
Busbar over-voltage		59P	<50 ms

Data sheet 4921240623G EN Page 20 of 31

Protections	Alarms	ANSI	Operate time
Busbar under-voltage	4	27P	<50 ms
Busbar over-frequency	3	810	<50 ms
Busbar under-frequency	4	81U	<50 ms
Emergency stop	1	1	<200 ms
Low auxiliary supply	1	27DC	
High auxiliary supply	1	59DC	
PV breaker external trip	1	5	
Synchronisation failure alarms		25	
Breaker open failure	1/breaker	52BF	
Breaker close failure		52BF	
Breaker position failure		52BF	
Phase sequence error	1	47	
De-load error	1	34	
Hz/V failure	1	53	
Not in Auto	1	34	
Vector jump	1	78	<40 ms
df/dt (ROCOF)	1	81R	<130 ms

NOTE * You can configure these protections for overload or reverse power.

Data sheet 4921240623G EN Page 21 of 31

2. Compatible products

2.1 Touch display unit: TDU

TDU is a pre-programmed touch screen display (www.deif.com/products/tdu-series). The TDU can be used for these controllers:

- · AGC 150 Generator, Mains and BTB
- ASC 150 Solar and Storage
- · AGC-4 Mk II Generator, Mains and BTB
- ASC-4 Solar and Battery
- · AGC-4 Generator, Mains and BTB

2.2 Power meters

Power measurements are required in single controller applications, as well as in open PMS applications. The controller can receive measurements from these DEIF power meters:

- MIB 8000C (www.deif.com/products/mib-8000c)
- MIC-2 MKII (www.deif.com/products/mic-2-mkii)
- MTR-4 (www.deif.com/products/mtr-4)



More information

See Application note, DEIF hybrid controller compatibility for supported power meters from other suppliers.

NOTE Alternatively, you can use the USW to set up the controller to use Modbus to read values from your power meter. The controller can read P, Q, and up to four digital inputs.

2.3 Power measurements from gensets

Power measurements are required in single controller applications, as well as in open PMS applications. The controller can receive measurements from these DEIF genset controllers:

- AGC 150 Generator (www.deif.com/products/agc-150-generator)
- AGC-4 Mk II Genset (www.deif.com/products/agc-4-mk-ii)
- AGC-4 Genset (www.deif.com/products/agc-4)
- CGC 400 (www.deif.com/products/cgc-400)



More information

See **Application note**, **DEIF hybrid controller compatibility** for supported power measurements from other genset suppliers.

2.4 Power management

You can use these controllers together in a power management system:

- AGC 150 Generator (www.deif.com/products/agc-150-generator)
- AGC 150 Mains (www.deif.com/products/agc-150-mains)
- AGC 150 BTB (www.deif.com/products/agc-150-btb)
- ASC 150 Solar (www.deif.com/products/asc-150-solar)
- ASC 150 Storage (www.deif.com/products/agc-150-storage)
- AGC-4 Mk II Genset, Mains, BTB, Group, and Plant (www.deif.com/products/agc-4-mk-ii)
- AGC-4 Genset, Mains, BTB, Group, and Plant (www.deif.com/products/agc-4)
- ASC-4 Solar (www.deif.com/products/asc-4-solar)

Data sheet 4921240623G EN Page 22 of 31

- ASC-4 Battery (www.deif.com/products/asc-4-battery)
- ALC-4 (Automatic Load Controller) (www.deif.com/products/alc-4)

2.5 Open PMS

You can use these controllers together in an open power management system:

- ASC 150 Solar (www.deif.com/products/asc-150-solar)
- ASC 150 Storage (www.deif.com/products/agc-150-storage)
- AGC 150 Mains (www.deif.com/products/agc-150-mains)
- ASC-4 Solar (www.deif.com/products/asc-4-solar)
- ASC-4 Battery (www.deif.com/products/asc-4-battery)
- AGC-4 Mk II Mains (www.deif.com/products/agc-4-mk-ii)

You can also use **AGC 150 Generator**, **AGC-4 Mk II Genset** and/or **AGC-4 Genset** as external gensets. That is, the genset controllers are not part of the open PMS. They can send their power measurements to the open PMS controllers over CAN bus.

2.6 Remote monitoring service: Insight

Insight is a responsive remote monitoring service (www.deif.com/products/insight). It includes real-time genset data, a customisable dashboard, GPS tracking, equipment and user management, email and/or SMS alerts, and cloud data management.

2.7 Additional inputs and outputs

The controller uses CAN bus communication with these:

- CIO 116 is a remote input expansion module (www.deif.com/products/cio-116).
- CIO 208 is a remote output expansion module (www.deif.com/products/cio-208).
- CIO 308 is a remote I/O module (www.deif.com/products/cio-308).
- IOM 220 and IOM 230 each have two analogue outputs. These can be used for general PID control.

2.8 Additional operator panel, AOP-2

The controller uses CAN bus communication to the additional operator panel (AOP-2). Configure the controller using M-Logic. On the AOP-2, the operator can then:

- Use the buttons to send commands to the controller.
- See LEDs light up to show statuses and/or alarms.

You can configure and connect two AOP-2s if the controller has the premium software package.

2.9 Other equipment

DEIF has a wide variety of other equipment that is compatible. Here are some examples:

- Synchroscopes
 - CSQ-3 (www.deif.com/products/csq-3)
- Battery chargers/power supplies
 - DBC-1 (www.deif.com/products/dbc-1)
- Current transformers
 - ASK (www.deif.com/products/ask-asr)
 - KBU (www.deif.com/products/kbu)

Data sheet 4921240623G EN Page 23 of 31

Transducers

MTR-4 (www.deif.com/products/mtr-4)

2.10 Controller types

Parameter	Setting	Controller type	Minimum software
	DG unit	Generator controller	S2
	DG unit	Generator Stand-alone controller	S1
	Mains unit	Mains controller	S2
	BTB unit	BTB controller	S2
	DG HYBRID unit	Genset-Solar hybrid controller	S2
	ENGINE DRIVE unit	Engine drive controller	S1
	Remote unit	Remote display	S1
9101	ENGINE DRIVE MARINE unit	Engine drive controller for marine use	S1
	DG MARINE unit	Stand-alone genset controller for marine use	S1
	ASC 150 Storage*	Battery storage controller	S3
	ASC 150 Solar*	Solar controller	S3
	ATS unit	Automatic transfer switch (open transition)	S1
	ATS unit	Automatic transfer switch (closed transition)	S2
	DG PMS LITE	PMS lite controller	S2

Software packages and controller types

The controller software package determines which functions the controller can use.

- S1 = Stand-alone
 - You can change the controller type to any other controller that uses S1 software.
- S2 = Core
- S3 = Extended
 - You can change the controller type to any other controller type*.
 - * To change to an ASC 150, the controller must have the sustainability option (S10).
- S4 = Premium
 - You can change the controller type to any other controller type*.
 - * To change to an ASC 150, the controller must have the sustainability option (S10).
 - All functions are supported.

You can select the controller type under ${\tt Basic}$ settings ${\tt >}$ Controller settings ${\tt >}$ Type.

Data sheet 4921240623G EN Page 24 of 31

3. Technical specifications

3.1 Electrical specifications

Power supply		
Power supply range	Nominal voltage: 12 V DC or 24 V DC Operating range: 6.5 to 36 V DC	
Voltage withstand	Reverse polarity	
Power supply drop-out immunity	0 V DC for 50 ms (coming from min. 6 V DC)	
Power supply load dump protection	Load dump protected according to ISO16750-2 test A	
Power consumption	5 W typical 12 W max.	
RTC clock	Time and date backup	

Supply voltage monitoring	
Measuring range	0 V to 36 V DC Max. continuous operating voltage: 36 V DC
Resolution	0.1 V
Accuracy	±0.35 V

Voltage measurement	
Voltage range	Nominal range: 100 to 690 V phase-to-phase (above 2000 m derate to max. 480 V)
Voltage withstand	$\rm U_n$ +35 % continuously, $\rm U_n$ +45 % for 10 seconds Measuring range of nominal: 10 to 135 % Low range, nominal 100 to 260 V: 10 to 351 V AC phase-to-phase High range, nominal 261 to 690 V: 26 to 932 V AC phase-to-phase
Voltage accuracy	±1 % of nominal within 10 to 75 Hz +1/-4 % of nominal within 3.5 to 10 Hz
Frequency range	3.5 to 75 Hz
Frequency accuracy	±0.01 Hz within 60 to 135 % of nominal voltage ±0.05 Hz within 10 to 60 % of nominal voltage
Input impedance	4 M Ω /phase-to-ground, and 600 k Ω phase/neutral

Current measurement	
Current range	Nominal: -/1 A and -/5 A Range: 2 to 300 %
Number of CT input	4
Max. measured current	3 A (-/1 A) 15 A (-/5 A)
Current withstand	7 A continuous 20 A for 10 seconds 40 A for 1 second
Current accuracy	From 10 to 75 Hz: • ±1 % of nominal from 2 to 100% current • ±1 % of measured current from 100 to 300 % current

Data sheet 4921240623G EN Page 25 of 31

Current measurement	
	From 3.5 to 10 Hz:
	• +1/-4 % of nominal from 2 to 100 % current
	• +1/-4 % of measured current from 100 to 300 % current
Burden	Max. 0.5 VA

Power measurement	
Accuracy power	±1 % of nominal within 35 to 75 Hz
Accuracy power factor	±1 % of nominal within 35 to 75 Hz

Digital inputs	
Number of inputs	12 x digital inputs Negative switching
Maximum input voltage	+36 V DC with respect to plant supply negative
Minimum input voltage	-24 V DC with respect to plant supply negative
Current source (contact cleaning)	Initial 10 mA, continuous 2 mA

DC outputs	
Number of 3 A outputs	2 x outputs 15 A DC inrush and 3 A continuous, supply voltage 0 to 36 V DC Endurance tested according to UL/ULC6200:2019 1.ed: 24 V, 3 A, 100000 cycles (with an external freewheeling diode)
Number of 0.5 A outputs	10 x outputs 2 A DC inrush and 0.5 A continuous, supply voltage 4.5 to 36 V DC
Common	12/24 V DC

Analogue inputs	
Number of inputs	4 x analogue inputs
Electrical range	 Configurable as: Negative switching digital input 0 V to 10 V sensor 4 mA to 20 mA sensor 0 Ω to 2.5 kΩ sensor
Accuracy	Current: • Accuracy: ± 20 uA ± 1.00 % rdg Voltage: • Range: 0 to 10 V DC • Accuracy: ± 20 mV ± 1.00 % rdg RMI 2-wire LOW: • Range: 0 to 800Ω • Accuracy: $\pm 2 \Omega \pm 1.00$ % rdg RMI 2-wire HIGH: • Range: 0 to 2500Ω • Accuracy: $\pm 5 \Omega \pm 1.00$ % rdg

Data sheet 4921240623G EN Page 26 of 31

Analogue outputs	
Output type	Isolated DC voltage output
Voltage range	-10 to +10 V DC
Resolution	Less than 1 mV
Maximum voltage	Output 52: ±550 V Output 55: ±3 kV
Minimum load	500 Ω
Accuracy	±1 % of setting value

Display unit	
Туре	Graphical display screen (monochrome)
Resolution	240 x 128 pixels
Navigation	Five-key menu navigation
Log book	Data log and trending function
Language	Multi-language display

3.2 Environmental specifications

Operation conditions	
Operating temperature (incl. display screen)	-40 to +70 °C (-40 to +158 °F)
Storage temperature (incl. display screen)	-40 to +85 °C (-40 to +185 °F)
Accuracy and temperature	Temperature coefficient: 0.2 % of full scale per 10 °C
Operating altitude	0 to 4000 m with derating
Operating humidity	Damp Heat Cyclic, 20/55 °C at 97 % relative humidity, 144 hours. To IEC 60255-1 Damp Heat Steady State, 40 °C at 93 % relative humidity, 240 hours. To IEC 60255-1
Change of temperature	70 to -40 °C, 1 °C / minute, 5 cycles. To IEC 60255-1
Protection degree	 IEC/EN 60529 IP65 (front of module when installed into the control panel with the supplied sealing gasket) IP20 on terminal side
Vibration	Response: 10 to 58.1 Hz, 0.15 mmpp 58.1 to 150 Hz, 1 g. To IEC 60255-21-1 (Class 2) Endurance: 10 to 150 Hz, 2 g. To IEC 60255-21-1 (Class 2) Seismic vibration: 3 to 8.15 Hz, 15 mmpp 8.15 to 35 Hz, 2 g. To IEC 60255-21-3 (Class 2)
Shock	10 g, 11 ms, half sine. To IEC 60255-21-2 Response (Class 2) 30 g, 11 ms, half sine. To IEC 60255-21-2 Withstand (Class 2) 50 g, 11 ms, half sine. To IEC 60068-2-27, test Ea Tested with three impacts in each direction in three axes (total of 18 impacts per test)

Data sheet 4921240623G EN Page 27 of 31

Operation conditions	
Bump	20 g, 16 ms, half sine IEC 60255-21-2 (Class 2) Tested with 1000 impacts in each direction on three axes (total of 6000 impacts per test)
Galvanic separation	CAN port 2: 550 V, 50 Hz, 1 minute RS-485 port 1: 550 V, 50 Hz, 1 minute Ethernet: 550 V, 50 Hz, 1 minute Analogue output 51-52 (GOV): 550 V, 50 Hz, 1 minute Analogue output 54-55 (AVR): 3000 V, 50 Hz, 1 minute Note: No galvanic separation on CAN port 1 and RS-485 port 2
Safety	Installation CAT. III 600 V Pollution degree 2 IEC/EN 60255-27
Flammability	All plastic parts are self-extinguishing to UL94-V0
EMC	IEC/EN 60255-26

3.3 UL/cUL Listed

Requirements	
Installation	To be installed in accordance with the NEC (US) or the CEC (Canada)
Enclosure	A suitable type 1 (flat surface) enclosure is required Unventilated/ventilated with filters for controlled/pollution degree 2 environment
Mounting	Flat surface mounting
Connections	Use 90 °C copper conductors only
Wire size	AWG 30-12
Terminals	Tightening torque: 5-7 lb-in.
Current transformers	Use Listed or Recognized isolating current transformers
Communication circuits	Only connect to communication circuits of a listed system/equipment

3.4 Communication

Communication		
CAN A	 CAN port You can connect these in a daisy chain (and operate them at the same time): CIO 116, CIO 208, and CIO 308 IOM 220 and IOM 230 Data connection 2 wire + common Not isolated External termination required (120 Ω + matching cable) 	
CAN B	CAN port - PMS Used for: • Power management communication • AOP-2 Data connection 2 wire + common Isolated External termination required (120 Ω + matching cable) PMS 125 kbit and 250 kbit	
RS-485 Port 1	Used for:	

Data sheet 4921240623G EN Page 28 of 31

Communication			
	 Modbus master to PV Modbus master to weather station Power meters Modbus RTU, PLC, SCADA, Remote monitoring (Insight) Data connection 2-wire + common Isolated External termination required (120 Ω + matching cable) 9600 to 115200 		
RS-485 Port 2	 Used for: Modbus master to PV Modbus master to weather station Power meters Modbus RTU, PLC, SCADA, Remote monitoring (Insight) Data connection 2-wire + common Not isolated External termination required (120 Ω + matching cable) 9600 to 115200 		
RJ45 Ethernet	 Used for: Modbus master to PV Modbus master to weather station Modbus to PLC, SCADA, and so on NTP time synchronisation with NTP servers Power management system (PMS) communication between AGC 150 and ASC 150 controllers Isolated Auto detecting 10/100 Mbit Ethernet port 		
USB	Service port (USB-B)		

3.5 Approvals

Standards


CE


UL/cUL Listed to UL/ULC6200:2019, 1 ed. controls for stationary engine gensets


NOTE Refer to www.deif.com for the most recent approvals.

Data sheet 4921240623G EN Page 29 of 31

3.6 Dimensions and weight

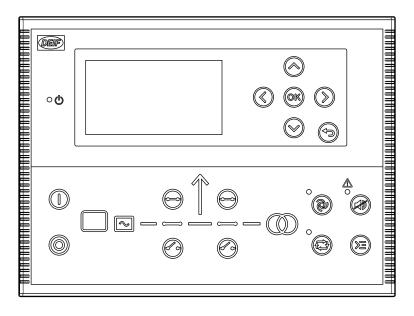

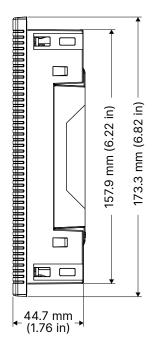

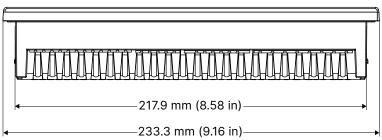



Dimensions and weight		
Dimensions	Length: 233.3 mm (9.16 in) Height: 173.3 mm (6.82 in) Depth: 44.7 mm (1.76 in)	
Panel cutout	Length: 218.5 mm (8.60 in) Height: 158.5 mm (6.24 in) Tolerance: ± 0.3 mm (0.01 in)	
Max. panel thickness	4.5 mm (0.18 in)	
Mounting	UL/cUL Listed: Type complete device, open type 1 UL/cUL Listed: For use on a flat surface of a type 1 enclosure	
Weight	0.79 kg	

3.7 Spare parts and accessories

Name	Details	Included with controller
Connector kit	A set of terminal blocks.	•
Fixing clamps	Clamps for mounting the controller.	•
J4	PC Ethernet cable crossed, 3 m. UL94 (V1) approved. Weight 0.2 kg (0.4 lbs).	
J7	PC cable for utility software (USB), 3 m. UL94 (V1) approved. Weight 0.2 kg (0.4 lbs).	

Data sheet 4921240623G EN Page 30 of 31

4. Legal information

Disclaimer

DEIF A/S reserves the right to change any of the contents of this document without prior notice.

The English version of this document always contains the most recent and up-to-date information about the product. DEIF does not take responsibility for the accuracy of translations, and translations might not be updated at the same time as the English document. If there is a discrepancy, the English version prevails.

Copyright

© Copyright DEIF A/S. All rights reserved.

4.1 Software version

This document is based on AGC 150 software version 1.19.

Data sheet 4921240623G EN Page 31 of 31