



## DATA SHEET



## LMR-111D

Loss of mains relay

ANSI code 78







-power in control



## DATA SHEET

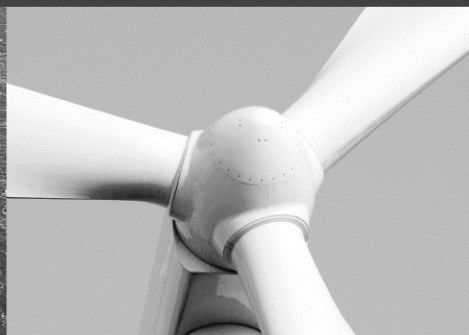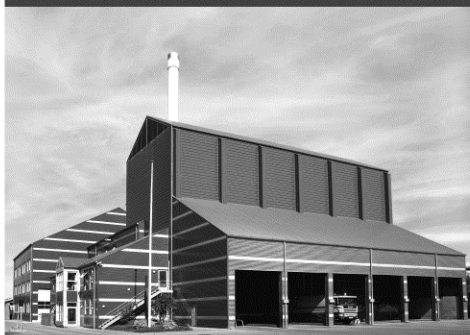

### **Loss of mains relay, LMR-111D** **ANSI code 78**

- Detection of vector shift
- Mains disconnection on mains failure
- Ensures no asynchronous reconnection
- LED indication of fault condition
- LED indication for activated relay
- 35 mm DIN rail or base mounting



DEIF A/S · Frisenborgvej 33 · DK-7800 Skive  
Tel.: +45 9614 9614 · Fax: +45 9614 9615  
info@deif.com · www.deif.com

Document no.: 4921240214G

### Application

The loss of mains relay type LMR-111D forms part of a complete DEIF series of relays for protection and control of generators.

This relay is applied for protection of synchronous generators, running in parallel with the mains.

A mains failure will be detected, provided a disconnection at an arbitrary point of the network results in a swift change of the generator frequency (vector shift). An opening signal is then transmitted to the mains circuit breaker, and the generator will thus be protected against damages caused by an automatic reconnection to the high-voltage network.

The LMR-111D will on the other hand not detect the normal, relatively slow and acceptable changes of the frequency of the network (the mains).

Furthermore, separation of a generator from the mains in case of mains failure is also stipulated as a condition in most national rules for connection of synchronous generators to the mains. Regarding Great Britain, see Engineering Recommendation G59.

### Measuring principle

The relay supervises the angular velocity of the phases of the mains. The velocity is supervised by comparing the times for the latest two full cycles with the times for the full cycles of the previous 4th and 5th period.

After five periods have passed (after connection to the mains) the relay will thus have performed the first measurement. After this the LMR-111D will within one period detect a vector shift.

This method of measurement (comparing periods 1 and 2 with periods 4 and 5) ensures correct detection of a vector shift occurring very close to the zero crossing of the AC voltage.

If the difference between the measurements exceeds the set point, the output is activated. Within 30 ms (inclusive of contact delay), an opening signal is transmitted to mains circuit breaker, and the LED marked "MAINS FAIL" is lit. The set point value is set on the front of the relay by means of a potentiometer marked "SENS".

The LMR-111D is provided with one reset input connected to contacts to the generator circuit breaker and to the mains circuit breaker. These two contacts should close when their respective circuit breaker is opened.

When the RESET (22-23) is activated, the LMR-111D will not detect a possible mains failure. This function ensures that the relay is only active when both circuit breakers are closed and the generator thus is running in parallel with the mains.

On receipt of a reset signal (transmitted by the mains circuit breaker auxiliary contact during opening of its circuit breaker), an internal timer is started. When this timer expires (after 2 s), the opening signal to the mains circuit breaker is cancelled, and the LED "MAINS FAIL" is switched off.

The LMR-111D is provided with an adjustable initialising timer, which is activated on cancellation of the reset signal (closing of circuit breakers). When this timer expires, the LMR-111D is activated and the LED "Supervision" is lit. The time delay is set on the front of the relay by means of the potentiometer "Delay".

### Relay outputs

The LMR-111D is provided with two output contacts (with common set points), either normally energised or normally de-energised. The contacts may be set to open or to close on activation.

#### Normally energised contact

Recommended for warning and alarm purposes. In case of an auxiliary supply drop-out, the contact is immediately activated.

#### Normally de-energised contact

Recommended for regulating and control purposes. An auxiliary supply failure will not result in an unwanted activation of the contact.

#### Power-up circuit

The relays are provided with a 200 ms power-up circuit, ensuring the correct function of the relay on connection of the auxiliary voltage.

**Note:** Normally energised contacts are not activated (contact does not open/close) until 200 ms after connection of the auxiliary voltage.

## Technical specifications

<b>Meas. voltage (U<sub>n</sub>):</b>	See supply voltage - AC ranges UL/cUL Listed: 57.7 to 450 V AC	<b>Supply volt. (U<sub>n</sub>):</b>	57.7-63.5-100-110-127-200-220- 230-240-380-400-415-440-450- 480-660-690 V AC $\pm 20\%$ (max. 4 VA)
<b>Overload:</b>	1.2 $\times$ U <sub>n</sub> , continuously 2 $\times$ U <sub>n</sub> for 10 s		24-48-110-220 V DC -25/+30 % (max. 3.5 W)
<b>Load:</b>	2 k $\Omega$ /V		UL/cUL Listed: Only 24 V DC and 110 V AC DC supply must be from a class 2 power source
<b>Frequency range:</b>	40 to <u>45</u> to <u>65</u> to 70 Hz		
<b>"RESET" inputs:</b>	Input voltage: 18 to 250 V AC/DC for "activated" condition Input impedance: 100 k $\Omega$	<b>Climate:</b>	HSE, to DIN 40040
<b>Output:</b>	2 change-over switches	<b>EMC:</b>	To IEC/EN 61000-6-1/2/3/4
<b>Contact type:</b>	Relays B + C: Normally energised ("NE"), or normally de-energised ("ND")	<b>Connections:</b>	Max. 4 mm <sup>2</sup> (single-stranded) Max. 2.5 mm <sup>2</sup> (multi-stranded)
<b>Contact ratings:</b>	250 V AC/24 V DC, 8 A (200 $\times$ 10 <sup>3</sup> change-overs at resis- tive load) UL/cUL Listed: Resistive load only	<b>Materials:</b>	All plastic parts are self-extin- guishing to UL94 (V1)
<b>Contact voltage:</b>	Max. 250 V AC/150 V DC	<b>Protection:</b>	Case: IP40. Terminals: IP20, to IEC 529 and EN 60529
<b>Response time:</b>	<30 ms	<b>Type approval:</b>	The Uni-line components are approved by the major classification societies. For current approvals see <a href="http://www.deif.com">www.deif.com</a> or contact DEIF A/S
<b>Temperature:</b>	-25 to 70 °C (-13 to 158 °F) (operating) UL/cUL Listed: Max. surrounding air temp. 60 °C/140 °F	<b>UL markings:</b>	UL Listed only on request UL Listing will be lost if the product is re-customised outside DEIF DK's production plant Wiring: Use 60/75 °C (140/167 °F) copper conductors only Wire size: AWG 12-16 or equivalent Installation: To be installed in accordance with the NEC (US) or the CEC (Canada)
<b>Temperature drift:</b>	Set points: Max. $\pm 0.2\%$ of full scale per 10 °C/50 °F		
<b>Galv. separation:</b>	Between inputs and outputs: 3250 V - 50 Hz - 1 min.		


## Settings and indication

Setting of	LED/relay
<b>Initialising ("DELAY"):</b> (0.5 to 5 s)	Yellow LED "SUPERVISION" is lit after the timer has expired.
<b>Sensitivity ("SENS"):</b> (2 to 20 electr. degr.)	Red LED "MAINS FAIL" is lit during fault condition.


The relay is furthermore equipped with a green LED marked "POWER" for indication of power ON.

Once the relay has been mounted and adjusted, the transparent front cover may be sealed to prevent unwanted change of the setting.

## Connections/dimensions (in mm)

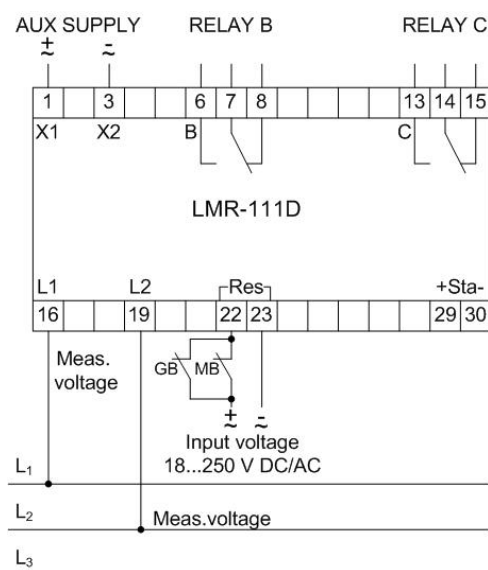

Shown contact positions: Aux. voltage not connected  
See installation instructions for information about status output (29-30)

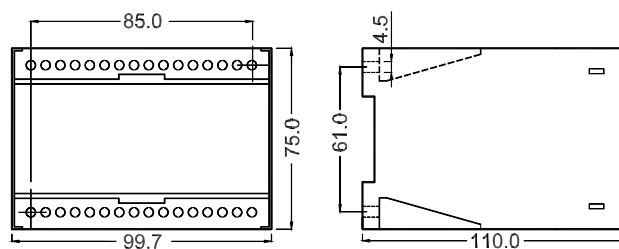

Weight: approx. 0.650 kg

## Order specifications

## Variants:

Mandatory information							
Item no.	Type	Variant no.	Measuring voltage	Supply	Aux. voltage (supply)	Relay func. B	Relay func. C

## Example:

Mandatory information							
Item no.	Type	Variant no.	Measuring voltage	Supply	Aux. voltage (supply)	Relay func. B	Relay func. C
2913410060	LMR-111D	01	400 V	DC	24 V	ND	NE
2913410060	LMR-111D	02	230 V	AC	230 V	NE	ND

Due to our continuous development we reserve the right to supply equipment which may vary from the described.



DEIF A/S, Frisenborgvej 33  
DK-7800 Skive, Denmark

Tel.: +45 9614 9614, Fax: +45 9614 9615  
E-mail: [deif@deif.com](mailto:deif@deif.com), URL: [www.deif.com](http://www.deif.com)

