


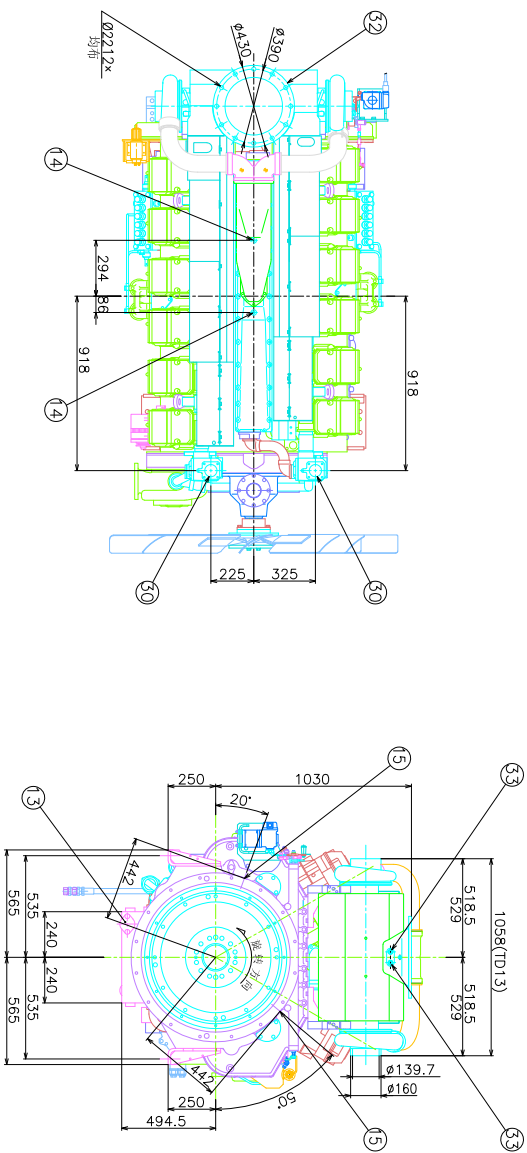

NO. 序号	PARTS NAME 名称	SIZE 规格	REF. 参考图号
1	FLYWHEEL & HOUSING 飞轮及飞轮壳	REF. 21001	38E96-21001
2	OIL PRESS. GAGE UNIT JOINT 油压表接口	REF. 1/8	38E96-01001
3	OIL PRESS. SWITCH JOINT 油压开关接口	REF. 1/8	38E96-01001
4	OIL PRESS. SWITCH JOINT 油压开关接口	REF. 1/8	38E96-01001
5	OIL PRESS. SWITCH JOINT 油压开关接口	REF. 1/8	38E96-01001
6	OIL PRESS. SWITCH JOINT 油压开关接口	REF. 1/8	38E96-01001
7	OIL PRESS. SWITCH JOINT 油压开关接口	REF. 1/8	38E96-01001
8	OIL PRESS. SWITCH JOINT 油压开关接口	REF. 1/8	38E96-01001
9	OIL PRESS. SWITCH JOINT 油压开关接口	REF. 1/8	38E96-01001
10	OIL PAN (A) JOINT 油底壳接口 A	REF. 1/8	38E96-01001
11	OIL PAN (B) JOINT 油底壳接口 B	REF. 1/8	38E96-01001
12	OIL PAN (C) JOINT 油底壳接口 C	REF. 1/8	38E96-01001
13	OIL PAN (D) JOINT 油底壳接口 D	REF. 1/8	38E96-01001
14	BAR PRESS. GAGE JOINT 气压表接口	REF. 1/8	38E96-01001
15	PICKUP JOINT 拾取接口	REF. 1/8	38E96-01001
16	COVER JOINT 盖板接口	REF. 1/8	38E96-01001
17	FUEL RETURN PIPE JOINT 燃油回油管接口	REF. 1/8	38E96-01001
18	FUEL RETURN PIPE JOINT 燃油回油管接口	REF. 1/8	38E96-01001
19	FUEL FILTER 燃油滤清器	REF. 1/8	38E96-01001
20	FUEL PRESS. SWITCH JOINT 燃油压力开关接口	REF. 1/8	38E96-01001
21	FUEL PRESS. SWITCH JOINT 燃油压力开关接口	REF. 1/8	38E96-01001
22	FUEL INJECTION PUMP 燃油喷射泵	REF. 1/8	38E96-01001
23	OIL FILTER 机油滤清器	REF. 1/8	38E96-01001
24	OIL LEVEL GAGE 油位计	REF. 1/8	38E96-01001
25	OIL FILL-FLOW FILTER 机油加注流量滤清器	REF. 1/8	38E96-01001
26	OIL FILL-FLOW FILTER 机油加注流量滤清器	REF. 1/8	38E96-01001
27	BREATHER 呼吸器	REF. 1/8	38E96-01001
28	WATER INLET PIPE JOINT 进水管接口	REF. 1/8	38E96-01001
29	WATER INLET PIPE JOINT 进水管接口	REF. 1/8	38E96-01001
30	WATER DRAIN COCK 放水开关	REF. 1/8	38E96-01001
31	EXHAUST FLANGE 排气歧管法兰	REF. 1/8	38E96-01001
32	EXHAUST FLANGE 排气歧管法兰	REF. 1/8	38E96-01001
33	EXHAUST FLANGE 排气歧管法兰	REF. 1/8	38E96-01001
34	STOP SOLENOID 停止电磁阀	REF. 1/8	38E96-01001

