



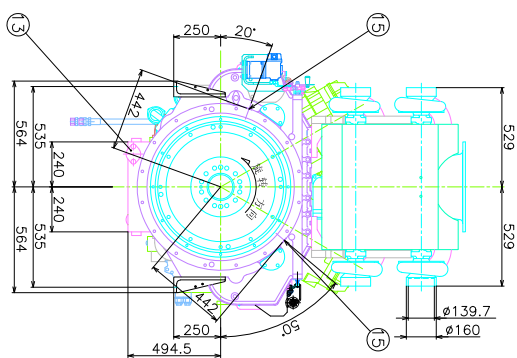

NO. 零件号	PARTS NAME 零件	SIZE 规格	REF. 参考图号
1	FLYWHEEL & HOUSING	飞轮及飞轮壳	38F96-21001
2	OIL PRESS. GAUGE UNIT JOINT	机油压力表接头	38F96-01001
3	OIL PRESS. SWITCH JOINT	机油压力表接头	38F96-01001
4	OIL PRESS. SWITCH JOINT	机油压力表接头	38F96-01001
5	OIL PRESS. SWITCH JOINT	机油压力表接头	38F96-01001
6	OIL PRESS. SWITCH JOINT	机油压力表接头	38F96-01001
7	OIL PRESS. SWITCH JOINT	机油压力表接头	38F96-01001
8	TEMPERATURE SWITCH JOINT	温度开关接头	38F96-01001
9	TEMPERATURE SWITCH JOINT	温度开关接头	38F96-01001
10	OIL PAN (A) JOINT	机油盘(A)接头	38F96-01001
11	OIL PAN (B) JOINT	机油盘(B)接头	38F96-01001
12	OIL PAN (C) JOINT	机油盘(C)接头	38F96-01001
13	OIL PAN (D) JOINT	机油盘(D)接头	38F96-01001
14	AIR PRESS. GAUGE JOINT	空气压力表接头	38F96-01001
15	PICKUP JOINT	拾取器接头	38F96-01001
16	FUEL INLET PIPE JOINT	燃油进油管接头	38F96-01001
17	FUEL INLET PIPE JOINT	燃油进油管接头	38F96-01001
18	FUEL RETURN PIPE JOINT	燃油回油管接头	38F96-01001
19	FUEL FILTER	燃油滤清器	38F96-01001
20	FUEL PRESS. SWITCH JOINT	燃油压力表接头	38F96-01001
21	FUEL PRESS. SWITCH JOINT	燃油压力表接头	38F96-01001
22	FUEL INJECTION PUMP	燃油喷射泵	38F96-01001
23	OIL FILTER	机油滤清器	38F96-01001
24	OIL LEVEL GAUGE	机油油位表	38F96-01001
25	OIL BY-PASS FILTER	机油旁通滤清器	38F96-01001
26	OIL BY-PASS FILTER	机油旁通滤清器	38F96-01001
27	OIL BY-PASS FILTER	机油旁通滤清器	38F96-01001
28	BREATHER	呼吸器	38F96-01001
29	WATER INLET PIPE JOINT	冷却水进油管接头	38F96-01001
30	WATER OUTLET PIPE JOINT	冷却水出油管接头	38F96-01001
31	WATER DRAIN COCK	放水阀	38F96-01001
32	EXHAUST FLANGE	排气法兰	38F96-01001
33	EXHAUST PIPE JOINT	排气管接头	38F96-01001
34	EXHAUST PIPE JOINT	排气管接头	38F96-01001

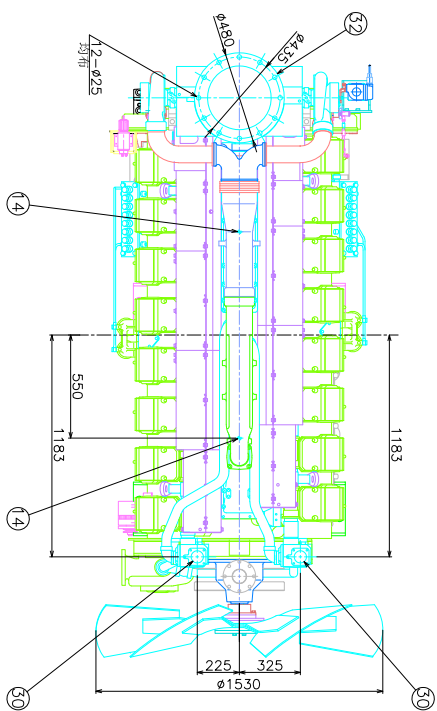